




iMac Intel 20" EMC 2133 and 2210 Optical Drive Thermal Sensor Replacement

Written By: Walter Galan

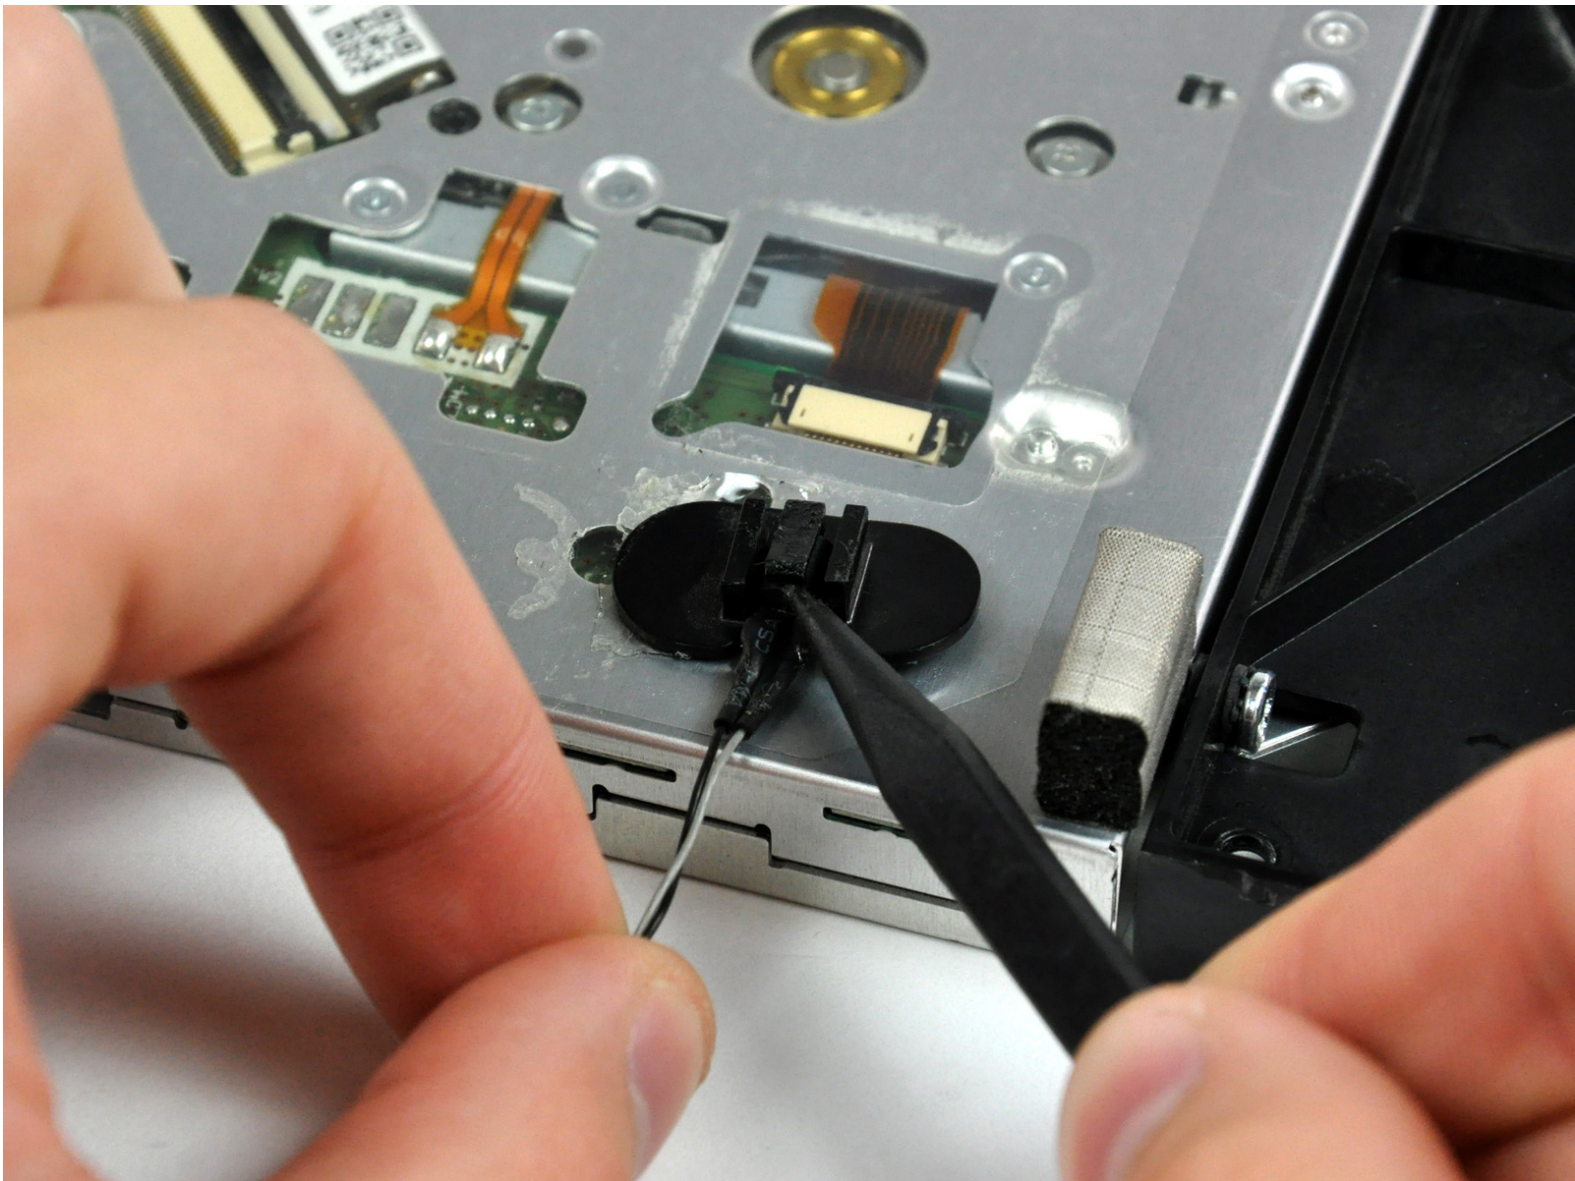

INTRODUCTION

Use this guide to replace your optical drive thermal sensor.

TOOLS:

- [Heavy-Duty Suction Cups \(Pair\)](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [T10 Torx Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Access Door



- Loosen the single Phillips screw in the center of the access door.
- ⓘ This screw is captive in the access door.
- Remove the access door from your iMac.

Step 2 — Glass Panel




- ⓘ The glass panel is fixed onto the front bezel with fourteen magnets around its perimeter.
 - Stick two suction cups to opposing corners of the glass panel.
- ⓘ To attach the [suction cups](#) we sell, first position the suction cup with the movable handle parallel to the face of the glass panel. While lightly holding the suction cup against the glass, raise the movable handle until it is parallel with the other handle.
- ⓘ If your suction cups refuse to stick, try cleaning both the glass panel and the suction cup with a mild solvent such as Windex.

Step 3



- Gently pull the glass panel straight up off the iMac.
- ⚠ The glass panel has several positioning pins around its perimeter. To avoid shearing these pins off the glass panel, be sure to only pull straight up during removal.
- ★ Be meticulous about cleaning the LCD and the inside face of the glass panel before reinstallation, as any fingerprints or dust trapped inside will be annoyingly visible when the display is on. Placing the glass flat, inside face down, on a fresh aluminum-foil surface is a good way to keep it clean.

Step 4 — Front Bezel

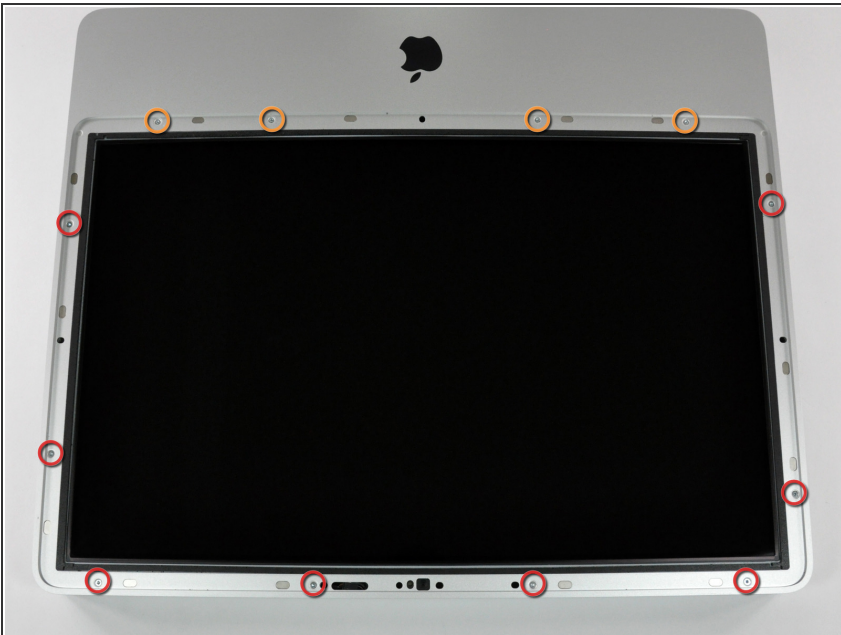



- Remove the following 12 screws securing the front bezel to the rear case:
 - Eight 13 mm T8 Torx.
 - Four 25 mm T8 Torx.

Step 5




- Disconnect the microphone cable connector, removing tape as necessary.
- ☑ For the front bezel to sit properly, be sure to tuck the microphone cable and connector into the void next to the camera board.

Step 6 — Display Panel

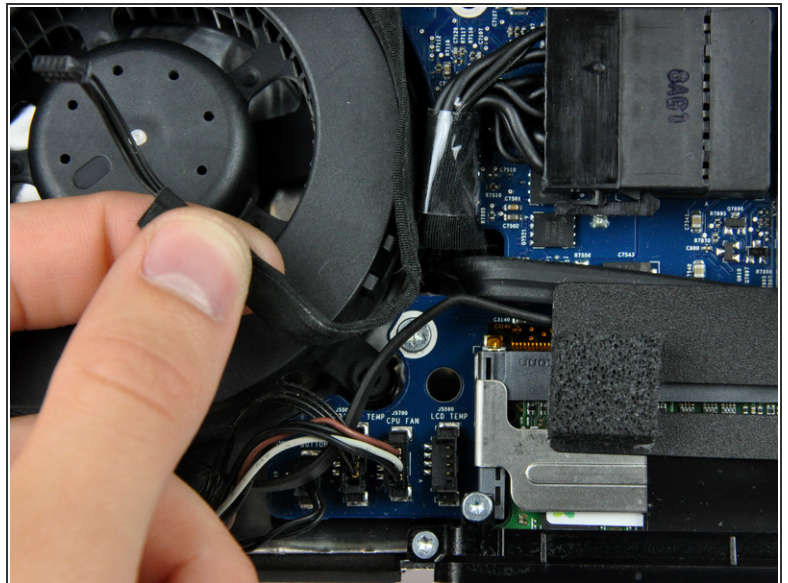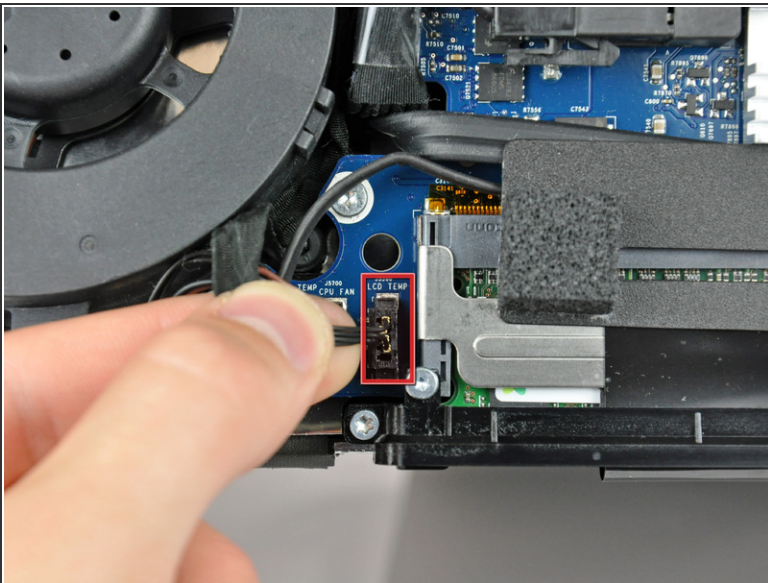


- Pull the LCD temperature sensor connector straight up out of its socket on the logic board.
- If necessary, de-route the LCD temperature sensor cable from behind the logic board.
- ⓘ When you remove the LCD, check the routing of the LCD temperature display cable. On reinstalling the display, be sure this cable does not block one of the bottom screws for the front bezel.

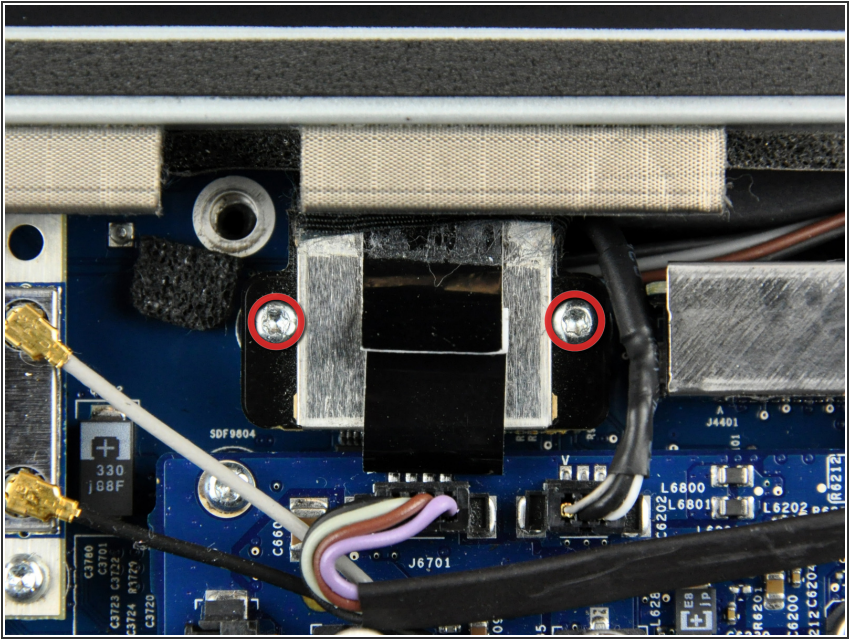

- Remove the two 5.3 mm T6 Torx screws securing the data display cable to the logic board.

Step 8

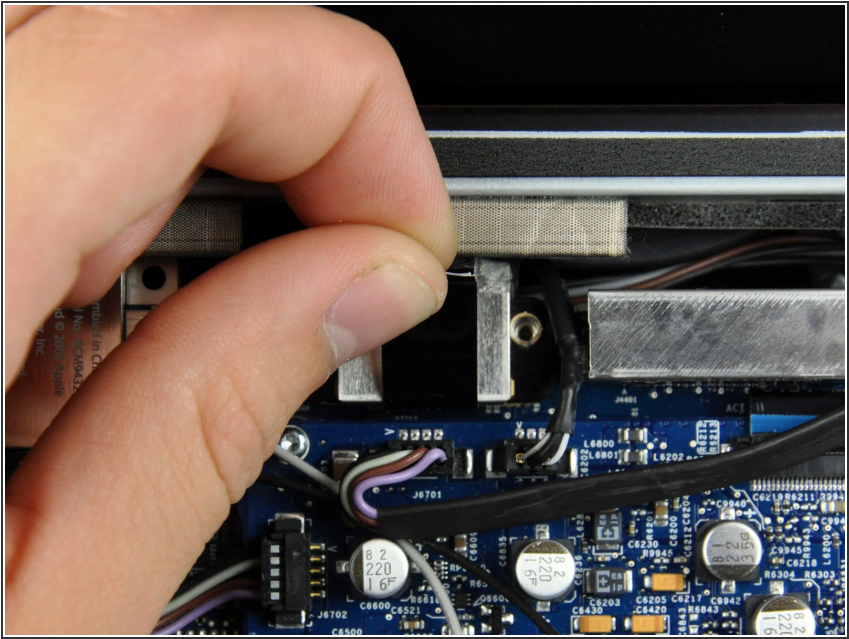


- Use the attached black tab to pull the data display cable connector away from the logic board.

Step 9




- Remove the eight 12 mm T8 Torx screws securing the display panel to the rear case.
- Lift the display panel from its left edge and rotate it toward the right edge of the iMac.

Step 10

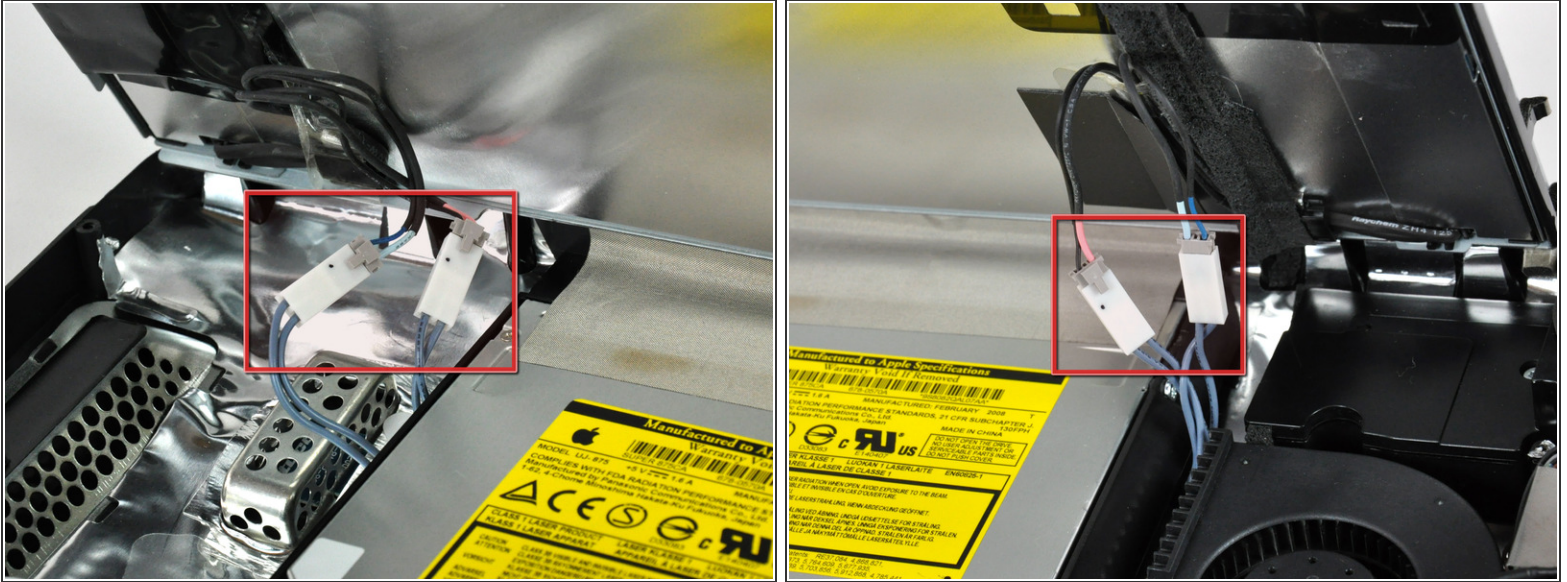


- With the display panel still lifted, disconnect the four inverter cables.
- ✦ During reinstallation, place the four inverter cable connectors in voids between components attached to the rear panel so the display panel will sit flush.
- ⓘ During reassembly, the order of the inverter cables is interchangeable within each socket.
- If you are replacing a hard drive and have an extra set of hands, it is possible to reach in and remove the drive without disconnecting anything but the LCD temp and display connector in the previous step with the LCD in its propped position.

Step 11 — Optical Drive

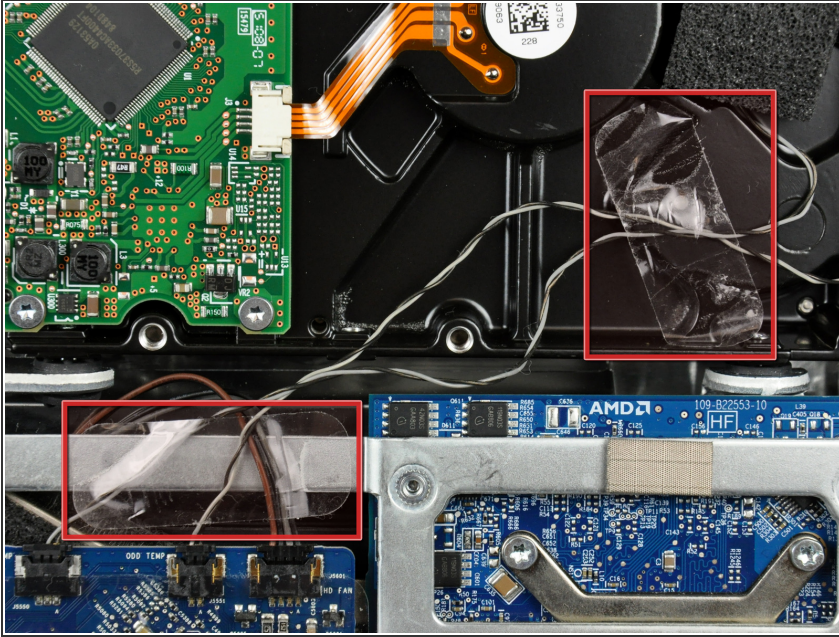

- If necessary, remove the pieces of tape securing the hard drive/optical drive thermal sensor cables to your iMac.

Step 12

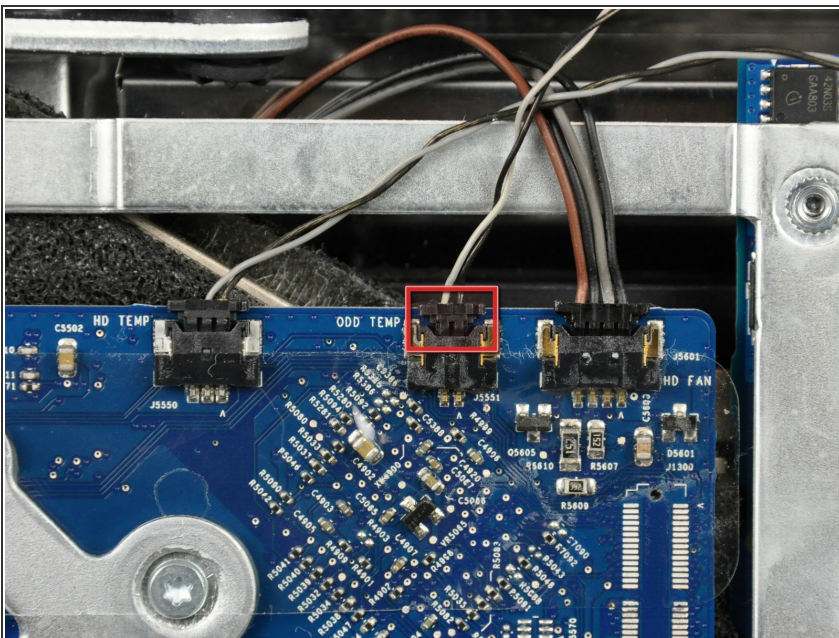


- Disconnect the optical drive thermal sensor connector from the logic board by pulling its connector toward the top of your iMac.
- ⓘ When removing this connector, it is helpful use your thumbnails to push the ears on either side of the connector toward the top of your iMac.

Step 13




- Remove the two fine-thread 7 mm T10 Torx screws securing the optical drive to the rear case.

Step 14

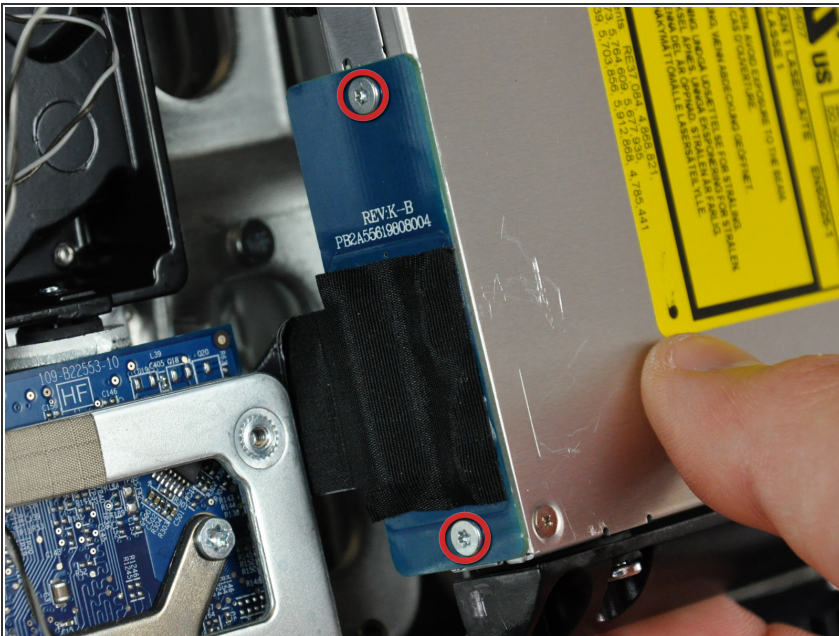

- Lift the free end of the optical drive slightly out of the rear case.
- Remove the two 3.5 mm T6 Torx screws securing the optical drive connector to the optical drive.

Step 15

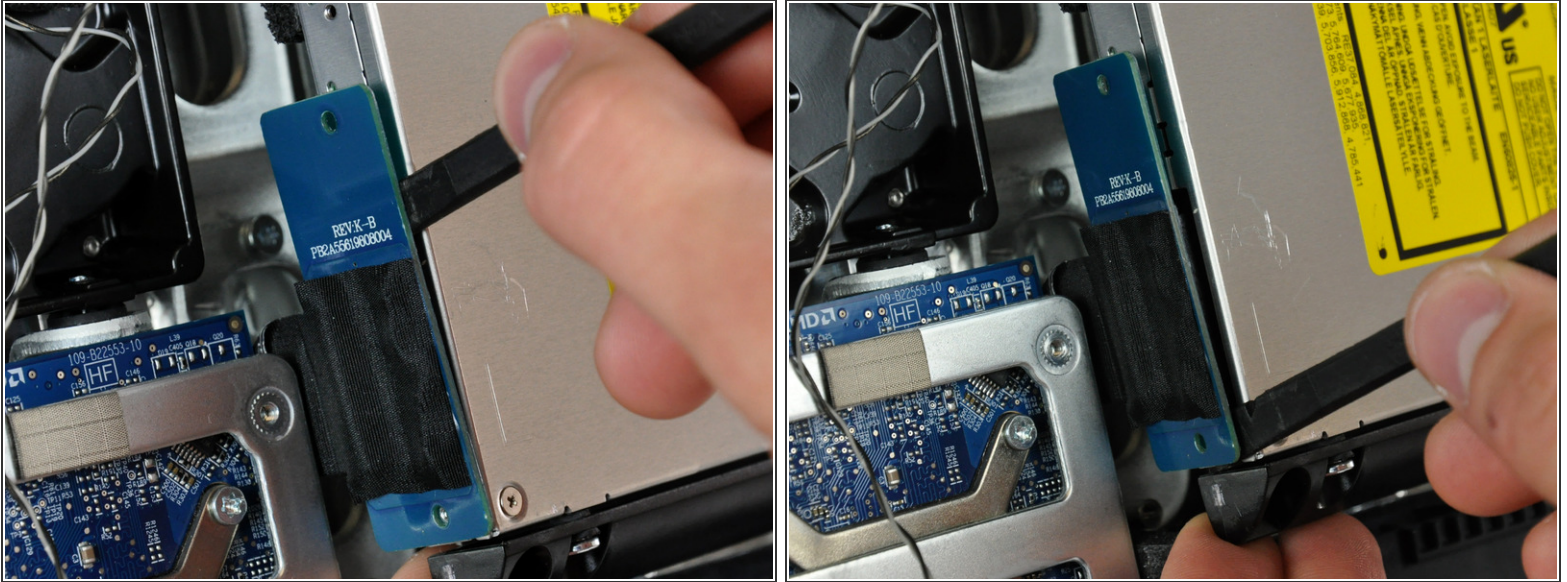



- Insert the flat end of a spudger between the optical drive connector and the body of the optical drive.
 - Twist the spudger to separate the connector from the optical drive.
- i** It may be necessary to work from alternating sides of the connector until it is disconnected.

Step 16



- Lift the optical drive out of the rear case and pull it away from the side of the rear case to release the strip of EMI tape attached to its surface.
- ✦** The optical drive thermal sensor is still attached to the underside of the optical drive.

Step 17 — Optical Drive Thermal Sensor

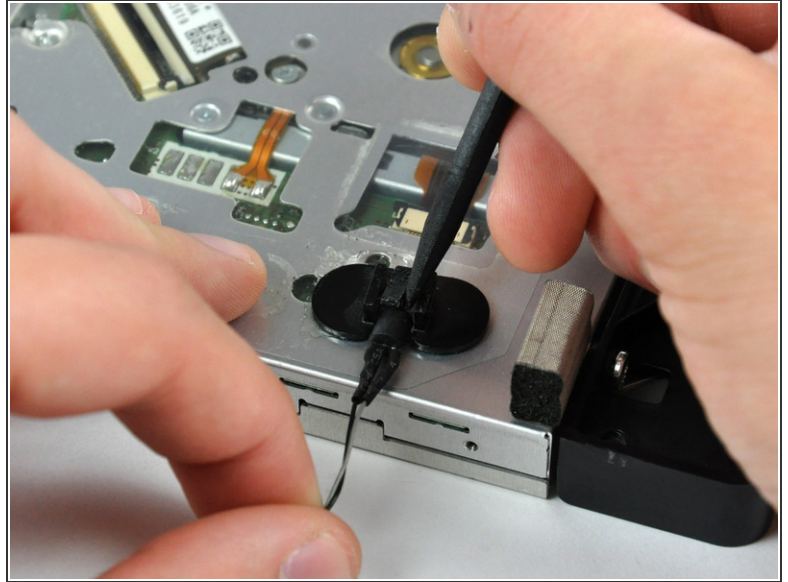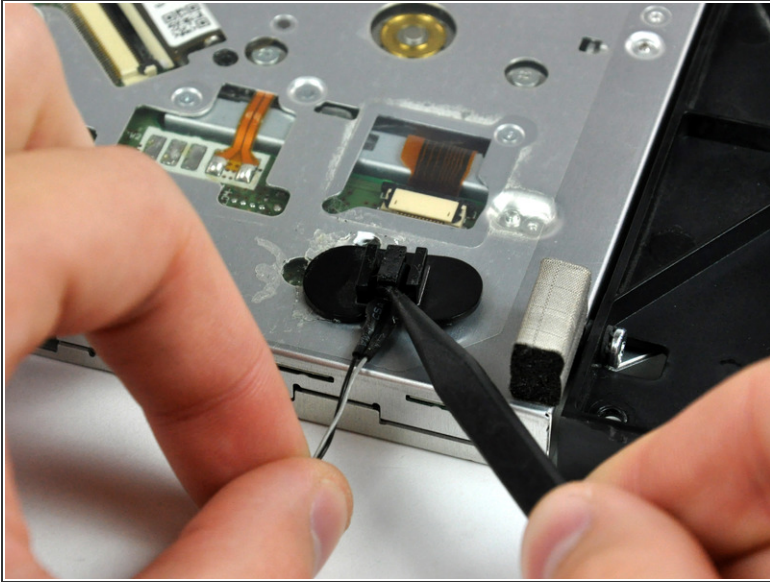

- To remove the optical drive thermal sensor, use the tip of a spudger to lift the center finger of the thermal sensor bracket while applying slight tension to the thermal sensor cable.
- ⓘ If your thermal sensor is stuck to the optical drive, use the flat end of a spudger to pry the thermal sensor bracket off the adhesive securing it to the optical drive.
- ✦ If the adhesive refuses to stick during reinstallation, apply double-stick tape to the underside of the two flat ears of the thermal sensor bracket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:43:38 AM.